




# AR767 H.P. Power - Jet Cleaner



## OPERATING MAINTENANCE MANUAL

Place  
Stamp  
Here

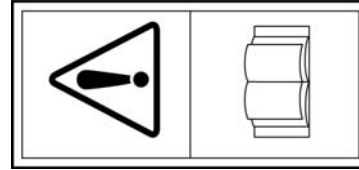

### **Warning:**

This manual must be read before installation or use of the unit.

### **Important Notice:**

Winter storage or storage. Drain all water from the pump. Flush the pressure washer with a 50% antifreeze solution and relieve the pressure before using it again to remove the antifreeze.

Buy Parts Now at  
**amazon.com**

A.R. North America  
Attn: Pressure Washer Warranty Department  
140 - 81st Avenue NE  
Fridley, MN 55432

[Click here to find your part on Amazon](#)

As an Amazon Associate, I earn from qualifying purchases.

# PRESSURE WASHER LIMITED WARRANTY

This product is under warranty to the original retail consumer against defects in material and workmanship for a period of 1 (one) year on machine, 90 days on gun and hose assembly, from the date of retail purchase and is not transferable. Warranty covers replacement parts. This limited one year warranty applies only to products used in consumer applications and does not apply to rental or commercial applications.

## WARRANTY RETURNS

Items returned for warranty consideration must have a Returned Merchandise Authorization (RMA) number. All unauthorized returns will be refused and shipped back to sender. Call 866-235-5112 Monday through Friday 8:00 a.m. - 5:00 p.m (Central Standard Time). Or E-Mail to: info@arnorthamerica.com 24 hours a day.

A.R. North America, Inc.  
140 - 81st Avenue NE • Fridley, MN 55432  
Attn: Pressure Washer Warranty Department



# PRESSURE WASHER LIMITED WARRANTY CARD

☐ Mr. ☐ Mrs. ☐ Ms. ☐ Miss  
First Name: Initial: Last Name:

Address: (Number and Street)

City:

State: Zip/Postal code:

Apt. #:

Telephone:

Date of Purchase:

Purchase Price: \$ (excludes tax)

Model Number:


Serial Number:

Located on product package/box

Store Name:



All fields must be filled out for warranty.  
Warranty void from Manufacture if this card is not returned.

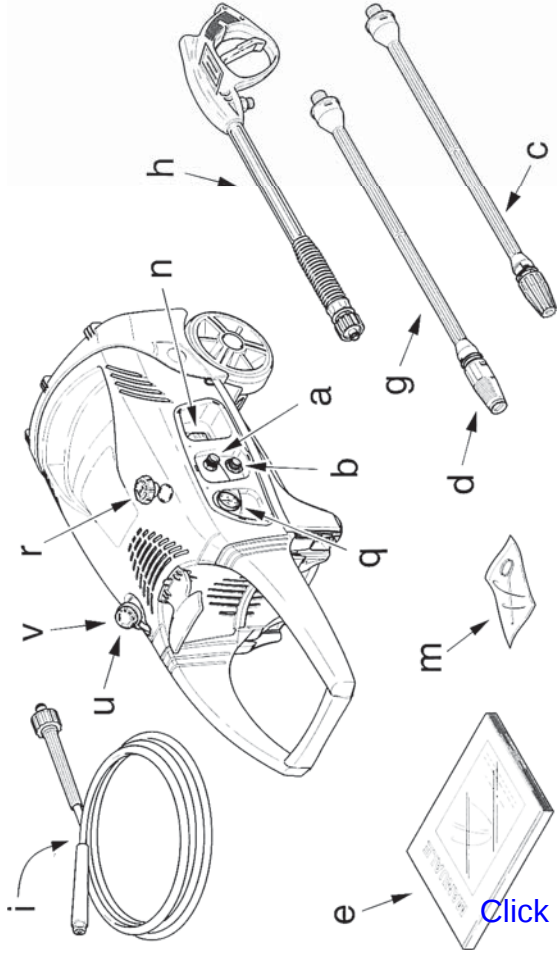

Key:

- a - Water outlet (OUTLET)
- b - Water inlet with filter (INLET)
- c - High pressure rotating nozzle kit (optional accessory)
- d - Adjustable spray nozzle
- e - Maintenance handbook
- f - Lance
- g - Gun with safety catch
- h - High-pressure hose
- i - Nozzle cleaning tool
- m - Motor switch
- n - Pressure gauge
- q - Pressure regulator knob
- r - Detergent tank plug
- u - Detergent control knob
- v -

[Click here to find your part on Amazon](#)



1. INTRODUCTION

The high pressure power-jet cleaner you have purchased is a technologically advanced product designed by one of the leading European manufacturers of high-pressure pumps. To obtain the best performance from your unit, read this booklet carefully and follow the instructions each time you use the cleaner. We congratulate you on your choice and wish you successful operation.

\* Read and understand these instructions before operating the cleaner. Pay particular attention to the safety symbols through out this manual. Failure to comply with these instructions may result in personal injury or property damage. DO NOT allow children to operate or play on or around this equipment.

\* Plug the cleaner into a properly grounded 3-prong outlet. Improper grounding can result in electrical shock.

2. SAFETY RULES

2.1 Safety "MUST NOTS"

- 

2.1.1 DO NOT use the cleaner with flammable or toxic liquids, or any products, which are not compatible with the correct operation of the cleaner. EXPLOSION OR POISONING HAZARD.
- 

2.1.2 DO NOT direct the water jet towards people or animals. INJURY HAZARD.
- 

2.1.3 DO NOT direct the water jet towards the unit itself, electrical parts or towards other electrical equipment. ELECTRICAL SHOCK HAZARD.
- 

2.1.4 DO NOT use the cleaner outdoors if raining. SHORT CIRCUIT HAZARD.
- 

2.1.5 DO NOT allow children or incompetent persons to use the cleaner. INJURY HAZARD.
- 

2.1.6 DO NOT touch the plug and/or socket with wet hands. ELECTRICAL SHOCK HAZARD.
- 

2.1.7 DO NOT use the cleaner if the electrical cable is damaged. ELECTRICAL SHOCK AND SHORT CIRCUIT HAZARD.
- 

2.1.8 DO NOT use the cleaner if the high-pressure hose or gun assembly is damaged. EXPLOSION HAZARD.
- 

2.1.9 DO NOT jam or lock the spray gun trigger in the open position. ACCIDENT HAZARD.
- 

2.1.10 Check that the data plates are affixed to the cleaner. Do not contact your dealer. Cleaners without plates must not be used, as they are unidentifiable and potentially dangerous. ACCIDENT HAZARD.



- 2.1.11  DO NOT tamper with or alter the calibration of the safety valve. EXPLOSION HAZARD.
- 2.1.12  DO NOT alter the original diameter of the spray head nozzle. OVER PRESSURIZATION MAY OCCURE.
- 2.1.13  DO NOT leave the cleaner unattended. ACCIDENT HAZARD.
- 2.1.14  DO NOT move the cleaner by pulling on the electrical cable. SHORT CIRCUIT HAZARD.

**2.2 Safety "MUSTS"**

- 2.2.1  All electrical circuits MUST BE PROTECTED against the water jet. SHORT CIRCUIT HAZARD.
- 2.2.2  The cleaner MUST ONLY BE CONNECTED to a ground fault system. ELECTRIC SHOCK HAZARD.

- Use of a safety residual current circuit-breaker (R.C.C.B.) will provide additional protection for the operator. (30 mA)

- 2.2.3   The high pressure may cause materials to bounce off surfaces at speeds; therefore protective clothing and safety goggles MUST BE WORN. INJURY HAZARD.
- 2.2.4  Before working on the cleaner, REMOVE the electrical plug. ACCIDENTAL START UP HAZARD.
- 2.2.5  Before pressing the trigger, GRIP the gun firmly to counteract the recoil. INJURY HAZARD.
- 2.2.6  COMPLY WITH the requirements of the local water supply company. According to DIN 1988, power-jet cleaners may only be connected to the mains drinking water supply with a backflow preventer valve with drain facility is installed in the supply hose. CONTAMINATION HAZARD.
- 2.2.7  A qualified technician MUST carry out maintenance and/or repair of the electrical components. ACCIDENT HAZARD.
- 2.2.8  DISCHARGE residual pressure before disconnecting the cleaner hose. Turn the water supply off and squeeze the spray gun trigger. INJURY HAZARD.
- 2.2.9  Before each use. CHECK that all the screws are fully tightened and that there are no broken or worn parts.
- 2.2.10   Only USE detergents, which will not corrode the coating materials of the high- pressure hose/electrical cable and unit components. EXPLOSION AND ELECTRIC SHOCK HAZARD.
- 2.2.11   ENSURE that all people or animals keep a minimum distance of 16 yd. (15m) away. INJURY HAZARD.

| PROBLEMS<br>AND<br>REMEDIES                                                                | PROBLEM                                                                                                                                                                                                                                                                                                                                                                                      |  |  |   |   |   |   |  |   |                                                                                                                  |
|--------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|--|---|---|---|---|--|---|------------------------------------------------------------------------------------------------------------------|
|                                                                                            | The pump does not operate at the prescribed pressure.<br>Sudden changes in pump pressure.<br>The motor buzzes but fails to start.<br>Motor does not start.<br>Water leakage.<br>Excess noise.<br>Oil leaks.<br>TSS MODELS ONLY: Motor starts even though the trigger is released.<br>TSS MODELS ONLY: No water when lever is operated (when supply hose is connected).<br>Power cord damage. |  |  |   |   |   |   |  |   |                                                                                                                  |
| Nozzle worn.                                                                               | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Replace nozzle.                                                                                                  |
| Water filter clogged.                                                                      | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Clean filter                                                                                                     |
| Water supply pressure low.                                                                 | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Turn on the water supply tap fully.                                                                              |
| Air being sucked into the system.                                                          | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  | ✓ |   |   |   |  |   | Check that hose fittings are tight.                                                                              |
| Air in pump.                                                                               | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Switch off the cleaner and operate the gun until a steady flow of water is obtained. The switch cleaner back on. |
| Adjustable nozzle not correctly positioned.                                                | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Pull the spray adjuster back (+).                                                                                |
| Water suction from external tank.                                                          | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Connect cleaner to the mains water supply.                                                                       |
| Water temperature too high.                                                                | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   | ✓ |   |   |  |   | Lower temperature.                                                                                               |
| Nozzle clogged.                                                                            | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   | ✓ |   |  |   | Disconnect power supply, discharge pressure and clean with tool provided.                                        |
| Worn seals.                                                                                |                                                                                                                                                                                                                                                                                                                                                                                              |  |  | ✓ |   | ✓ |   |  |   | Have seals replaced by an authorized service center.                                                             |
| No electrical power. (S)                                                                   |                                                                                                                                                                                                                                                                                                                                                                                              |  |  | ✓ |   |   |   |  |   | Check that the plug is firmly in the socket and that main power is present.                                      |
| Supply voltage below required minimum.                                                     | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Check the voltage of the main supply line.                                                                       |
| Voltage loss due to use of extension cord of inadequate cross-section or excessive length. | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Consult instructions regarding extension cords.                                                                  |
| High pressure cleaner in disuse for long time.                                             | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Contact nearest service center.                                                                                  |
| Problems with TSS device.                                                                  | ✓                                                                                                                                                                                                                                                                                                                                                                                            |  |  |   |   |   |   |  |   | Contact nearest service center.                                                                                  |
| High pressure system or pump hydraulic circuit not watertight.                             |                                                                                                                                                                                                                                                                                                                                                                                              |  |  |   |   |   | ✓ |  |   | Contact nearest service center.                                                                                  |
|                                                                                            |                                                                                                                                                                                                                                                                                                                                                                                              |  |  |   |   |   |   |  | ✓ | Contact nearest service center.                                                                                  |

Click here to find your part on Amazon

- Always use two hands when operating a pressure washer. This will assure complete control of the equipment.
- Always test the GFCI plug prior to using the cleaner.
- Never test the pressure of the cleaner against any part of the body.
- Use the trigger lock whenever the spray gun is not being used for cleaning.
- Always seek emergency medical care immediately if any fluid penetrates the skin. A cut may be deeper and more serious than it appears.
3. GENERAL RULES

3.1.1 The USE and MAINTENANCE manual constitutes an essential part of the cleaner equipment and should be kept in a safe place for future reference. If you sell the cleaner, the manual should be handed on to the new owner.

3.1.2 Before starting the cleaner, make sure that it is receiving water correctly. Operating the cleaner without water could damage the seals.

3.1.3 Do not disconnect the plug by pulling on the electrical cable.

3.1.4 If you are too far from the object you wish to clean, do not move the cleaner nearer by pulling on the high pressure hose; use the handle provided.

3.1.5 Protect the cleaner from freezing during the winter. Store in a warm area.

3.1.6 Do not obstruct the ventilation grilles during operation.

3.1.7  The cross-section of any extension cord used must be proportional to their length, i.e., the longer the extension cord, the greater the cross-section; cables with a protection level of "IPX5" must be used. See table A.

Table A

| Motor | Voltage Volts | Extension cable up to 25 m | Extension up to 50 m |
|-------|---------------|----------------------------|----------------------|
|       | 220 – 230240  | Section3x1.5mm²            | Section3x2.5mm²      |
|       | 100 – 115120  | Section3x2.5mm²            | Section3x4.0mm²      |

- 3.1.8 Position the cleaner AS NEAR AS POSSIBLE to the supply.
- 3.1.9 The packaging is easily recyclable, and must be disposed of in compliance with the regulations in force in the country of installation.

Buy Parts Now at
amazon.com

(S) If the motor stops and fails to restart, wait 2 - 3 minutes before restarting. THERMAL CUTOOUT TRIPPED. If this fault occurs more than once, contact your service center.

More troubleshooting information on our website at [www.arnorthamerica.com](http://www.arnorthamerica.com).

3.1.10

Use the cleaner only with accessories and replacement parts authorized by the manufacturer. The use of original accessories and replacement parts will ensure safe, trouble-free operation.

3.1.11

The cleaner must be used standing on a secure, stable surface, positioned as shown.



3.2 Intended Use

3.2.1

The cleaner is intended only for the cleaning of vehicles, machines, boats, buildings, etc., by the removal of stubborn dirt using clean water and chemical detergents.

For domestic use only (single-phase motors only). Not for professional use (for three-phase or industrial motors only), and only for operation at temperatures above 32° F. Compliant with EN 60335-2-79/A1 standard.

When using chemical detergents, only use biodegradable

types. We recommend HOBBY – FOAM detergent (#3206).

Only clean vehicle engines in areas in which suitable oil traps are installed.

[Click here to find your part on Amazon](#)

3.3 Safety Valve

3.3.1

The safety valve also functions as a pressure-limiting valve. When the gun trigger is released, the safety valve opens and the water recirculates through the pump inlet. Never try to adjust this valve.

4. INSTALLATION/ASSEMBLY

4.1



Fit the lance into the gun by rotating and pushing until the two parts are completely locked.



4.2 Connect the gun to the high-pressure hose.




AR767 - Motor

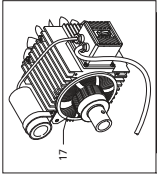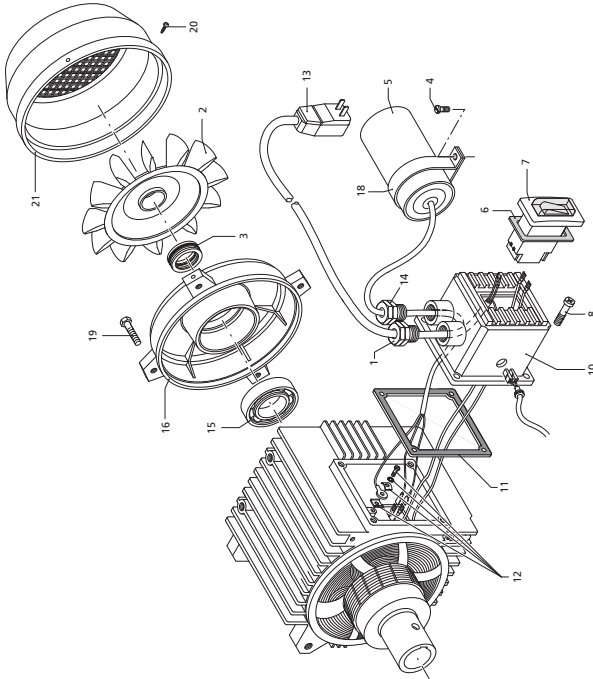

| Pos. | Code    | Description      | Qty. |
|------|---------|------------------|------|
| 1    | 1271950 | Cable retainer   | 1    |
| 2    | 1260300 | Fab              | 1    |
| 3    | 1260970 | Seal ring        | 1    |
| 4    | 1260810 | Screw TCTC M4x10 | 1    |
| 5    | 2360420 | Capacitor 80uF   | 1    |
| 6    | 1265080 | Gasket           | 1    |
| 7    | 1272030 | Switch           | 1    |
| 8    | 1261560 | Screw 3.9x16     | 4    |
| 10   | 1260341 | Switch box       | 1    |
| 11   | 1260400 | Gasket           | 1    |
| 12   | 1269100 | Earth clamp      | 1    |
| 13   | 1466890 | Cable            | 1    |
| 14   | 1269090 | Cable retainer   | 1    |
| 15   | 1260950 | Bearing          | 1    |
| 16   | 1260961 | Motor shield     | 1    |
| 17   | 44075   | Electric motor   | 1    |
| 18   | 1340280 | Clamp            | 1    |
| 19   | 480621  | Screw TE M5x25   | 4    |
| 20   | 1261570 | Screw 3.9x9.5    | 4    |
| 21   | 1271660 | Fan housing      | 1    |

# AR767 - Unloader

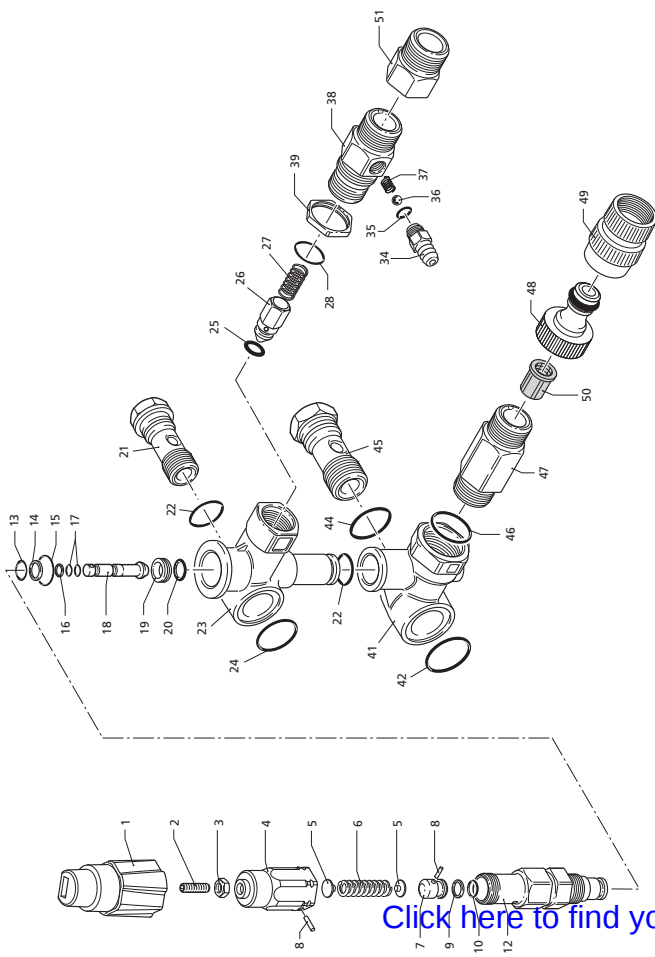

[Click here to find your part on Amazon](#)

4.3 Connect the high-pressure hose to the water (OUTLET) on the cleaner.

4.4 Connect the water supply hose. (not supplied) to the water (INLET) of the cleaner. The supply hose must have an internal diameter of at least 13 mm (1/2 in.) and must be reinforced. The water supply must be at least equal to the cleaner delivery capacity.



The intake water temperature must NOT exceed 60° C (122°F). The water supply pressure must NOT exceed 10 BAR (145 PSI).

4.4.1



CAUTION! The cleaner must only be used with clean water; use of unfiltered water or corrosive chemicals will damage the cleaner.

4.5 Turn the motor switch to the "0" position.



4.6

Check that the electrical supply voltage and frequency (Volts/Hz) correspond those specified on the cleaner data plate. If the power supply is correct, you may now plug in the cleaner.

The cleaner must only be connected to power sockets with regulation earth connection. A differential safety breaker (30mA) will increase the safety of operators.



CAUTION! The machine may cause electrical disturbances when starting.

4.6.1

If the motor stops and fails to restart, wait 2 to 3 minutes before restarting. THERMAL CUTOFF TRIPPED. COOL BEFORE RESTARTING.

## 5. USE

5.1 Turn on the water supply tap FULLY.  
5.2 Release the safety catch, then press the trigger for a few seconds to allow air to escape and to discharge residual pressure in the pipes.


### Repair Kits



| Pos. | Code    | Description            | Qty. |
|------|---------|------------------------|------|
| 1    | 2500210 | Knob extension         | 1    |
| 2    | 392840  | Grub screw M6x16       | 1    |
| 3    | 1980300 | Nut M6                 | 1    |
| 4    | 2500400 | Knob insert            | 1    |
| 5    | 1980220 | Spring plate           | 2    |
| 6    | 1271070 | Spring                 | 1    |
| 7    | 1080041 | Upper piston           | 1    |
| 8    | 1080070 | Pin                    | 2    |
| 9    | 1080401 | Back-up ring           | 1    |
| 10   | 1080250 | O-Ring Ø7,6x1,78       | 1    |
| 11   | 1980210 | Piston guide           | 1    |
| 12   | 740290  | O-Ring Ø14x1,78        | 1    |
| 13   | 800560  | O-Ring Ø8,73x1,78      | 1    |
| 14   | 880830  | O-Ring Ø15,54x2,62     | 1    |
| 15   | 1271170 | Back-up ring           | 1    |
| 16   | 1080190 | O-Ring Ø2,90x1,78      | 2    |
| 17   | 1271160 | Lower piston           | 1    |
| 18   | 1980200 | Valve seat             | 1    |
| 19   | 1470210 | O-Ring Ø9x1            | 1    |
| 20   | 1540270 | Screw 3/8" G - Brass   | 1    |
| 21   | 390080  | O-Ring Ø11,91x2,62     | 2    |
| 22   | 1540510 | Valve housing          | 1    |
| 23   | 1140450 | O-Ring Ø20,24x2,62     | 1    |
| 24   | 1460430 | O-Ring Ø4x2,5          | 1    |
| 25   | 1540170 | Jet                    | 1    |
| 26   | 1080091 | Ball spring            | 1    |
| 27   | 394280  | O-Ring Ø12,42x1,78     | 1    |
| 28   | 1560490 | Hose tail              | 1    |
| 29   | 480480  | O-Ring Ø4,48x1,78      | 1    |
| 30   | 1250280 | Stainless steel ball   | 1    |
| 31   | 1560520 | Spring                 | 1    |
| 32   | 1540570 | Fitting 3/8" G Ø2      | 1    |
| 33   | 1540300 | Nut                    | 1    |
| 34   | 1540280 | By-pass housing 3/8" G | 1    |

5.3

Keeping the trigger pressed, push the switch to start the motor.  
Turn the pressure control knob to the desired setting. (For models with this feature).

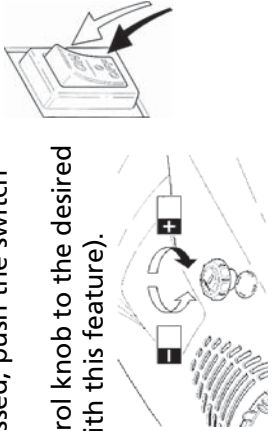

5.3.1

When re-starting the motor, always keep the spray gun trigger compressed.

## 5.4 Using Detergent



**CAUTION! liquid detergent must be sprayed at low pressure. See 5.5 "Proper use of standard accessories".**


5.4.2

Fill the detergent tank to the level indicated through the inlet.



5.4.3

Select LOW PRESSURE (see instructions); the detergent will be sucked up and mixed with the water, with the suction rate regulated by the knob provided.

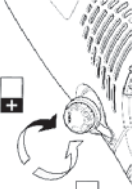

5.4.4

Now distribute the detergent drawn in and mixed with water.


## 5.5 Correct Use of standard accessories.

 The cleaner is equipped with the adjustable nozzle, which provides some important functions:

**LOW PRESSURE** operation (for suction and spraying of detergent).

**HIGH PRESSURE** operation (for high pressure washing and rinsing).

Jet adjustment from pencil to fan. (For models with this feature).





## 5.6 Correct Use of the Rotary Nozzle (Where fitted)

For increased washing power, use the rotary nozzle kit as follows:

Turn off the high pressure cleaner.

# AR767 - Pump

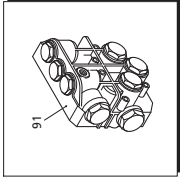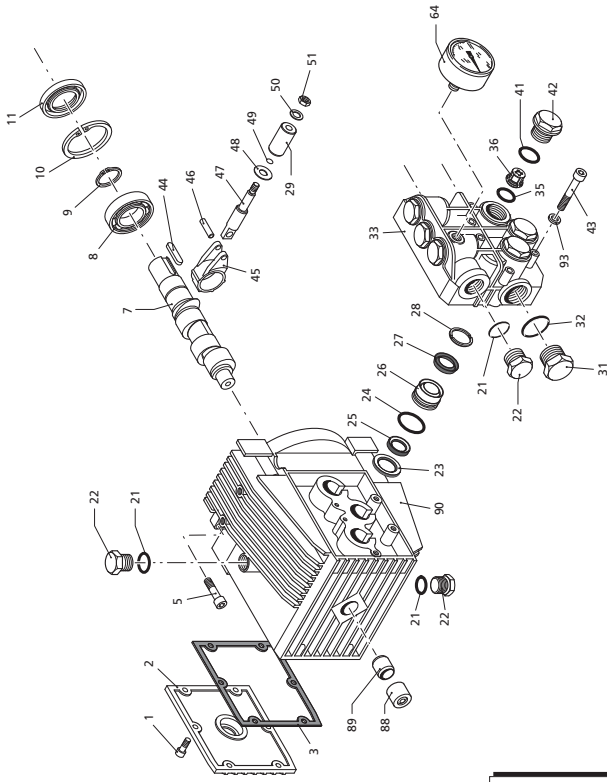

| Pos. | Code    | Description            | Qty. |
|------|---------|------------------------|------|
| 1    | 1260760 | Screw TCEI M5x20       | 6    |
| 2    | 1269101 | Rear cover             | 1    |
| 3    | 1260040 | Gasket                 | 1    |
| 5    | 1260780 | Screw TCEI M5x25       | 4    |
| 7    | 1260190 | Crankshaft             | 1    |
| 8    | 1804000 | Bearing                | 1    |
| 9    | 1260770 | Circlip Øe25           | 1    |
| 10   | 1260790 | Seal ring              | 1    |
| 11   | 1260750 | O-Ring Ø14x1.78        | 1    |
| 21   | 740290  | Plug 3/8" G - Brass    | 3    |
| 22   | 1980740 | Seal ring              | 3    |
| 23   | 1260460 | O-Ring Ø26.70x1.78     | 3    |
| 24   | 1260420 | C1 gasket              | 3    |
| 25   | 1260440 | Piston guide Ø15       | 3    |
| 26   | 1260151 | Gasket Ø15             | 3    |
| 27   | 1271650 | Gasket support ring    | 3    |
| 28   | 1260141 | Piston Ø15             | 3    |
| 29   | 1260121 | Plug 1/2" G - Brass    | 3    |
| 31   | 820361  | O-Ring Ø17.5x2         | 1    |
| 32   | 180101  | Pump head              | 1    |
| 33   | 1260021 | O-Ring Ø15.54x2.62     | 6    |
| 35   | 880830  | Complete valve         | 6    |
| 36   | 1269050 | O-Ring Ø17.86x2.62     | 6    |
| 41   | 960160  | Valve plug             | 6    |
| 42   | 1260162 | Screw TCEI M6x60       | 6    |
| 43   | 680570  | Key                    | 1    |
| 44   | 1380520 | Aluminum con rod       | 3    |
| 45   | 1260060 | Piston pin             | 3    |
| 46   | 1260080 | Guiding piston         | 3    |
| 47   | 1260070 | Spacer disc            | 3    |
| 48   | 1260091 | O-Ring Ø4.48x1.78      | 3    |
| 49   | 480480  | Piston washer          | 3    |
| 50   | 1260100 | Stainless steel nut M8 | 3    |
| 51   | 1260110 |                        |      |


| Pos. | Code    | Description          | Qty. |
|------|---------|----------------------|------|
| 64   | 3226    | Pressure gauge Ø40mm | 1    |
| 88   | 1264010 | Bearing              | 1    |
| 89   | 1264000 | Internal ring        | 1    |
| 90   | 1260011 | Pump housing         | 1    |
| 91   | 1269278 | Pump head assembly   | 1    |
| 93   | 1381550 | Washer Ø16.4         | 6    |

## Repair Kits



Buy Parts Now at  
**amazon.com**

# AR767 - Body

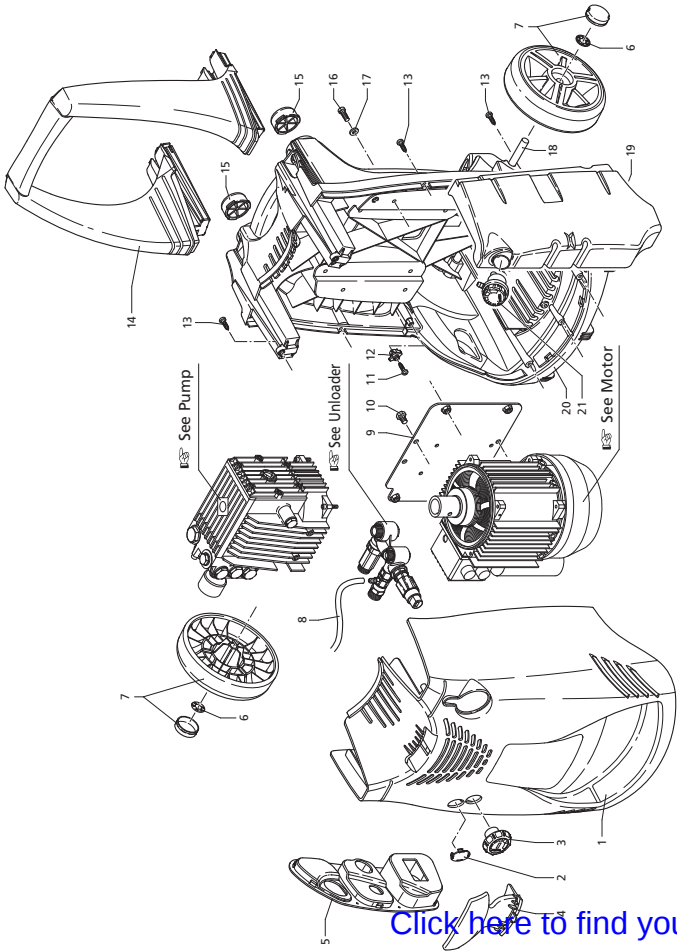

[Click here to find your part on Amazon](#)

- 5.6.3 Unscrew the adjustable head and fit the rotary nozzle onto the lance.
- 5.6.4 Turn the high pressure cleaner back on.

## 5.7 Recommended Cleaning Procedure

- 5.7.1 Dissolve dirt by applying detergent with the fan jet to the dry surface.  
On vertical surfaces, work from the bottom upwards. Leave the detergent to act for 1 to 2 minutes, but do not allow to dry out. Apply the high pressure jet, keeping the nozzle at least 10 in. from the surface, working from the bottom upwards. Avoid allowing the rinsing water to run on the unwashed surfaces.

## 5.8 Storage

- 5.8.1 Switch off the cleaner.
- 5.8.2 Turn off the water supply tap.
- 5.8.3 After use, the detergent residues should be removed from the tank.
- 5.8.4 Discharge residual pressure by pressing the trigger until no more water comes out of the adjustable nozzle.
- 5.8.5 Engage the gun safety catch.
- 5.8.6 Remove the plug from the socket.
- 5.8.7 Operate the cleaner with non-corrosive/non-toxic antifreeze before storing for the winter.

## 6 MAINTENANCE




- 6.1 **CAUTION!** Before working on the cleaner, disconnect the plug from the power supply socket.
- 6.2 To ensure good performance, check and clean the suction and detergent filters after every 50 hours of operation.
- 6.3 Long periods of disuse may lead to the formation of lime scale deposits. Working the hole on the rear, or a 6 Allen key (6) for models with this feature.
- 6.4 Clean the nozzle with the tool provided. Remove any dirt from the nozzle and rinse.



Buy Parts Now at  
**amazon.com**




| Pcs. | Code    | Description             | Qty. |
|------|---------|-------------------------|------|
| 1    | 2500040 | Blue casing             | 1    |
| 1    | 2500340 | Closing plug            | 1    |
| 1    | 2500310 | Knob                    | 1    |
| 1    | 2500050 | Hook                    | 1    |
| 1    | 2500240 | Cover                   | 1    |
| 2    | 1680880 | Washer                  | 2    |
| 2    | 2500320 | Driven gear Ø175        | 2    |
| 1    | 2500330 | Detergent hose          | 1    |
| 1    | 2500100 | Fixing plate            | 1    |
| 4    | 1260470 | Screw TE M8x10          | 4    |
| 1    | 2100300 | Screw 5x16              | 1    |
| 1    | 2600100 | Gland                   | 1    |
| 7    | 2100300 | Screw 5x16              | 7    |
| 1    | 2500020 | Handle                  | 1    |
| 2    | 2500130 | Rubber feet             | 2    |
| 4    | 880280  | Screw TCEI M6x18        | 4    |
| 4    | 2180300 | Washer Ø6.2             | 4    |
| 1    | 2500120 | Wheels axle             | 1    |
| 1    | 2509001 | Detergent tank assembly | 1    |
| 1    | 2500010 | Body                    | 1    |
| 1    | 42113   | Complete detergent plug | 1    |

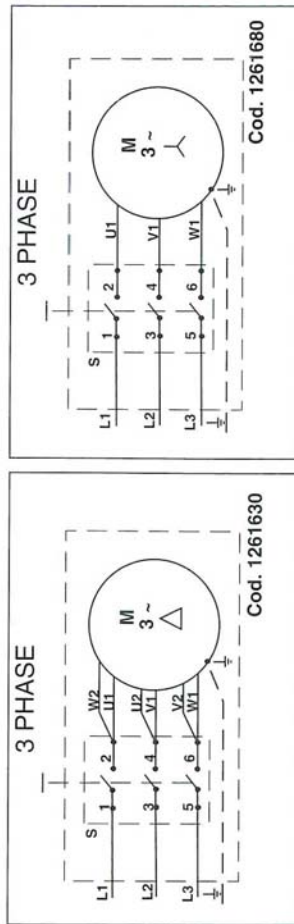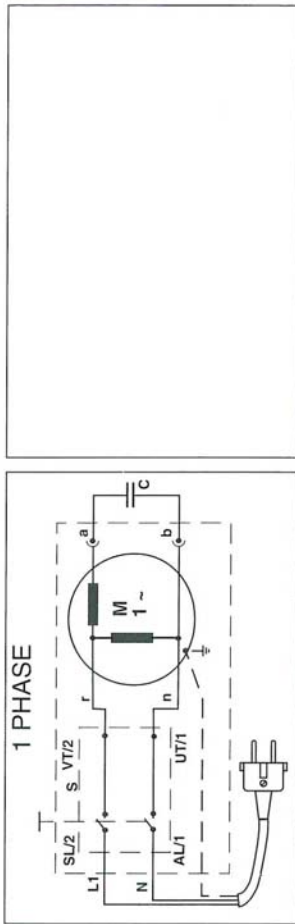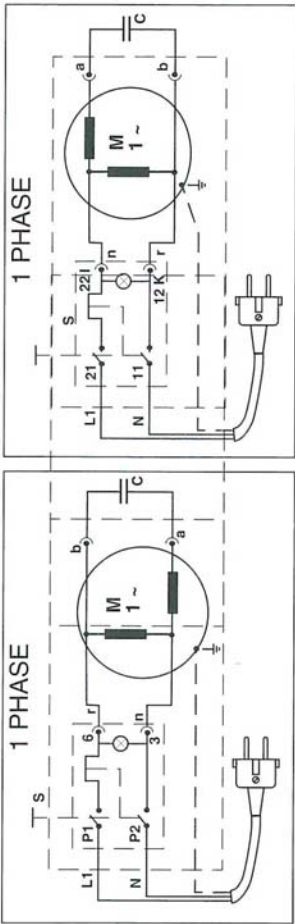

The characteristics and descriptions given are not binding. - Les données, les descriptions et les illustrations de cette notice n'engagent pas le fabricant. - Angaben, Beschreibungen, und Illustrationen sind nicht verbindlich. - Dati, descrizioni ed illustrazioni sono forniti a titolo indicativo e non impegnativo. - Los datos, las descripciones y las ilustraciones se suministran a título indicativo y no comprometen al fabricante. - As características e ilustrações o fabricante. - Gegevens, en illustraties dienen ter ori niet bindend. - Alle de beschrijvingen en tekeningen zijn niet bindend. - Informationer og billeder u - Tiedot ja kuvat sitoumuksetta. - Οι περιγραφές και οι εικόνες είναι μόνο για ενημερωτικούς σκοπούς.

| n       | b         | a       | r        |
|---------|-----------|---------|----------|
| BLACK   | WHITE     | BLUE    | RED      |
| NOIR    | BLANC     | BLEU    | ROUGE    |
| SCHWARZ | WEISS     | BLAU    | ROT      |
| NERO    | BIANCO    | AZZURRO | ROSSO    |
| NEGRO   | BLANCO    | AZUL    | ROJO     |
| PRETO   | BRANCO    | LAZUL   | VERMELHO |
| ZWART   | WIT       | BLAUW   | ROOD     |
| SORT    | HVID      | BLÅ     | RØD      |
| SVART   | VIT       | BLÅ     | RÖD      |
| MUSTA   | VALKOINEN | SININEN | PUNAINEN |
| MAYPO   | ΛΕΥΚΟ     | ΓΑΛΑΖΙΟ | KOKKINO  |

Buy Parts Now at  
**amazon.com**

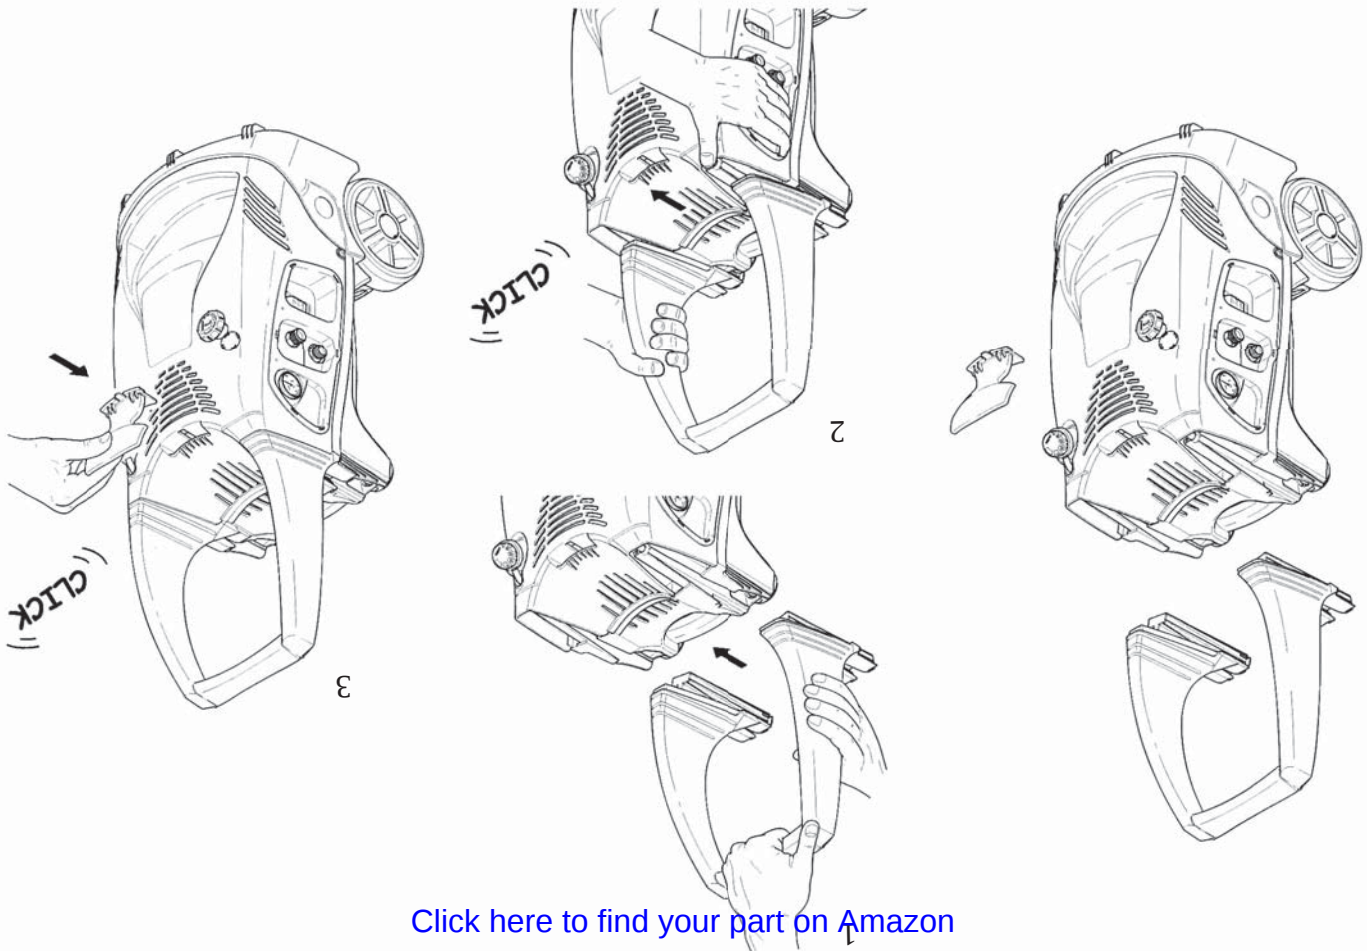

[Click here to find your part on Amazon](#)